


## Disassembly

*Figure 10*  
**3G Module Removal**

- Locate the 3G module.
- Remove the screw and disconnect the cables.
- The module will pop-up.
- Remove the 3G module.

## Removing the 3G Module

- Turn off the computer, turn it over and remove the battery ([page 2 - 5](#)), and component bay cover ([page 2 - 6](#)).
- The 3G module will be visible at point **1** on the mainboard ([Figure 10a](#)).
- Carefully remove the screw **2** and disconnect cables **3** & **4** ([Figure 10b](#)).
- The 3G module **5** ([Figure 10c](#)) will pop-up, and you can remove it from the computer ([Figure 10 d](#)).

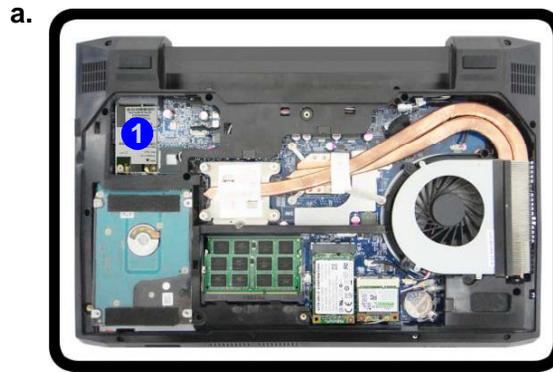

5. 3G Module

- 1 Screw


## Disassembly

### Figure 12 mSATA Module Removal

- Locate the mSATA module.
- Remove the screw.
- The module will pop-up.
- Remove the mSATA module.

## Removing the mSATA Module

- Turn off the computer, turn it over and remove the battery ([page 2 - 5](#)), and component bay cover ([page 2 - 6](#)).
- The mSATA module will be visible at point **1** on the mainboard ([Figure 12a](#)).
- Carefully remove the screw **2** ([Figure 12b](#)).
- The mSATA module **3** ([Figure 12c](#)) will pop-up, and you can remove it from the computer ([Figure 12d](#)).

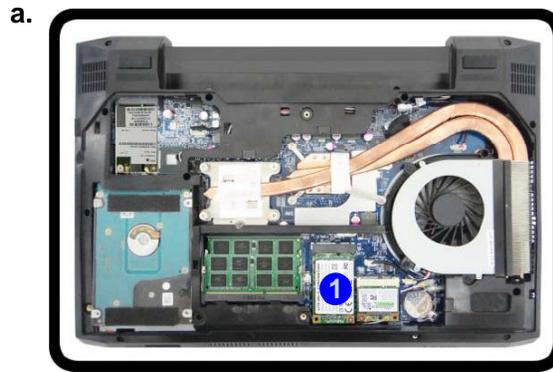

4. mSATA Module

- 1 Screw