

Disassembly



Figure 2

Battery Installation

- Slide the battery straight into the compartment.
- Lock the battery as indicated.

Battery Installation Procedure

- Slide the battery **1** straight into the compartment (note that there are grooves on the side of the battery which should align up with the battery compartment).
- Lock the battery in place by sliding the latches in the direction of arrows **2** & **3**.

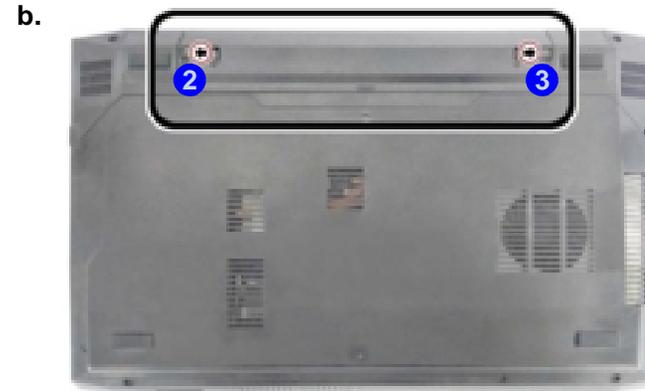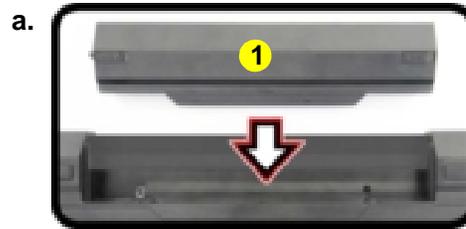

1. Battery

Removing the Hard Disk Drive

The hard disk drive is mounted in a removable case and can be taken out to accommodate other 2.5" SATA hard disk drives with a height of 9.5mm or 7mm (h). Follow your operating system's installation instructions, and install all necessary drivers and utilities (as outlined in **Chapter 4 of the User's Manual**) when setting up a new hard disk.

Hard Disk Upgrade Process


1. Turn off the computer, and turn it over and remove the battery ([page 2 - 5](#)).
2. Locate the hard disk bay cover and remove screws **1** - **4**.
3. Lift and pull the bay cover in the direction of the arrow **5** and **6**.
4. Remove the bay cover **7**.

- a. Remove the screws.
- b. Lift and pull the bay cover.
- c. Remove the cover.



a.



b.

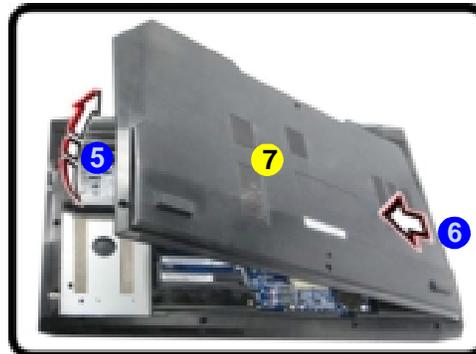

c.

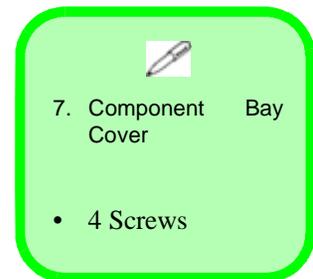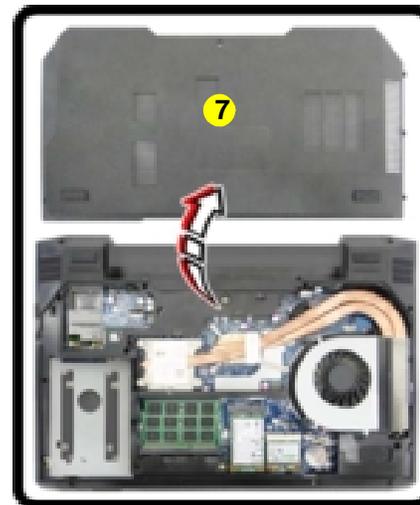




Disassembly

Figure 12
WLAN Module Removal

- Locate the WLAN module.
- Remove the screw and disconnect the cables.
- The module will pop-up.
- Remove the WLAN module.

Removing the WLAN Module

- Turn off the computer, turn it over and remove the battery ([page 2 - 5](#)), and component bay cover ([page 2 - 7](#)).
- The WLAN module will be visible at point **1** on the mainboard ([Figure 12a](#)).
- Carefully remove the screw **2** and disconnect cables **3** & **4** ([Figure 12b](#)).
- The WLAN module **5** ([Figure 12c](#)) will pop-up, and you can remove it from the computer ([Figure 12d](#)).

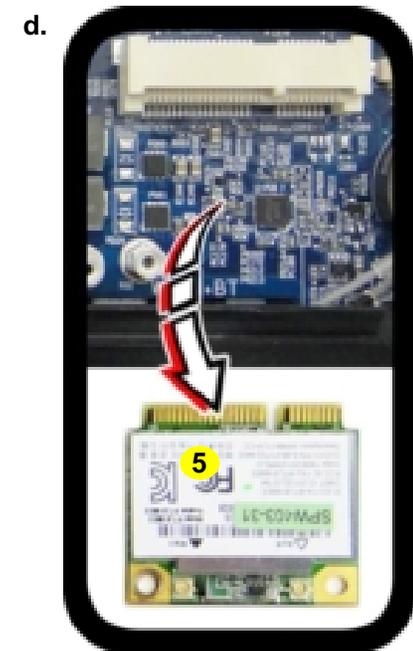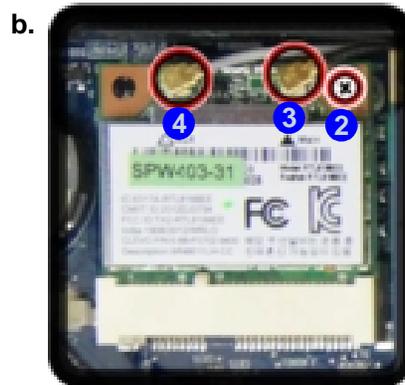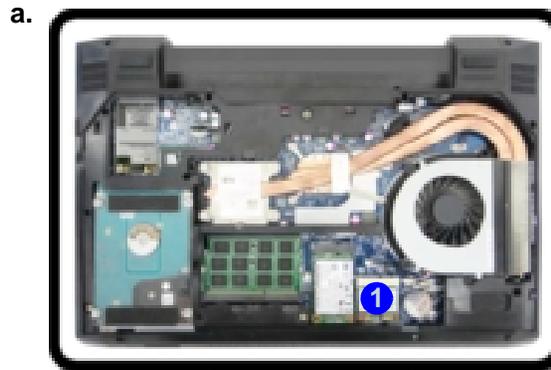

5. WLAN Module

- 1 Screw