

P150HM



LCD Replacement Manual

NOTE: All disassembly procedures assume that the system is turned **OFF**, and disconnected from any power supply (the battery is removed too).

Maintenance Tools

The following tools are recommended when working on the notebook PC:

- M3 Philips-head screwdriver
- M2.5 Philips-head screwdriver (magnetized)
- M2 Philips-head screwdriver
- Small flat-head screwdriver
- Pair of needle-nose pliers
- Anti-static wrist-strap

1. Remove the 4 LCD Rubber Pads (Circled Red)



2. Using a Philips screwdriver remove the 4 screws



3. Using the ends of your fingers carefully pull the LCD frame up and out releasing it

Do the same on both sides and pull forward to release the LCD Front Cover



4. Using a Philips screw driver remove the 3 screws on each side of the LCD Panel



5. At the top of the LCD panel pull forward placing the LCD panel on the keyboard area



6. Carefully remove the LCD cable from the LCD



7. Remove the LCD

