



Disassembly

Figure 6
Keyboard Removal

- Unsnap the LED cover at point 2 using non-metallic instrument.
- Lift the LED cover module and remove the screws from the keyboard.
- Disconnect the cables from the locking collar.
- Remove the keyboard.

Removing the Keyboard

- Turn off the computer, and turn it over and remove the battery ([page 2 - 5](#)).
- Turn the computer over, open the Lid/LCD, and carefully unsnap up the center cover module **1** from point **2** (between F11 & F12) using non-metallic instrument.
- Lift up the center cover module **1** off the computer.
- Remove screws **3** - **7** from the keyboard.
- Carefully lift the keyboard **8** up, being careful not to bend the keyboard ribbon cable.
- Disconnect the keyboard ribbon cable **9** from the locking collar socket **10**, and the keyboard LED cable **11** from its locking collar socket **12**.
- Remove the keyboard **8**.
- Reverse the process to replace the keyboard (make sure to reconnect the keyboard cable).

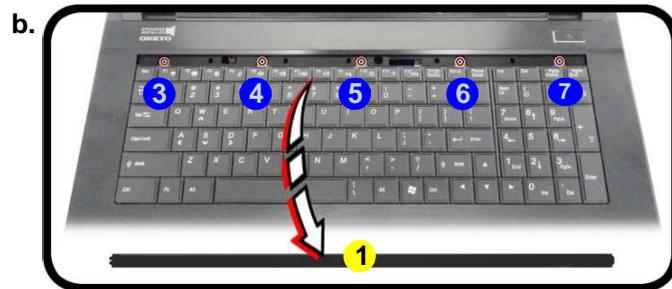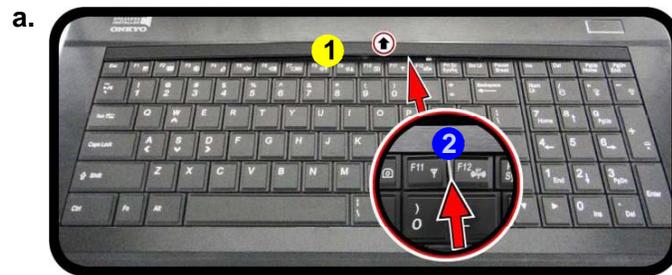

- Center Cover Module
 - Keyboard
- 5 Screws



Re-Inserting the Keyboard

When re-inserting the keyboard firstly align the keyboard tabs at the bottom of the keyboard with the slots in the case.