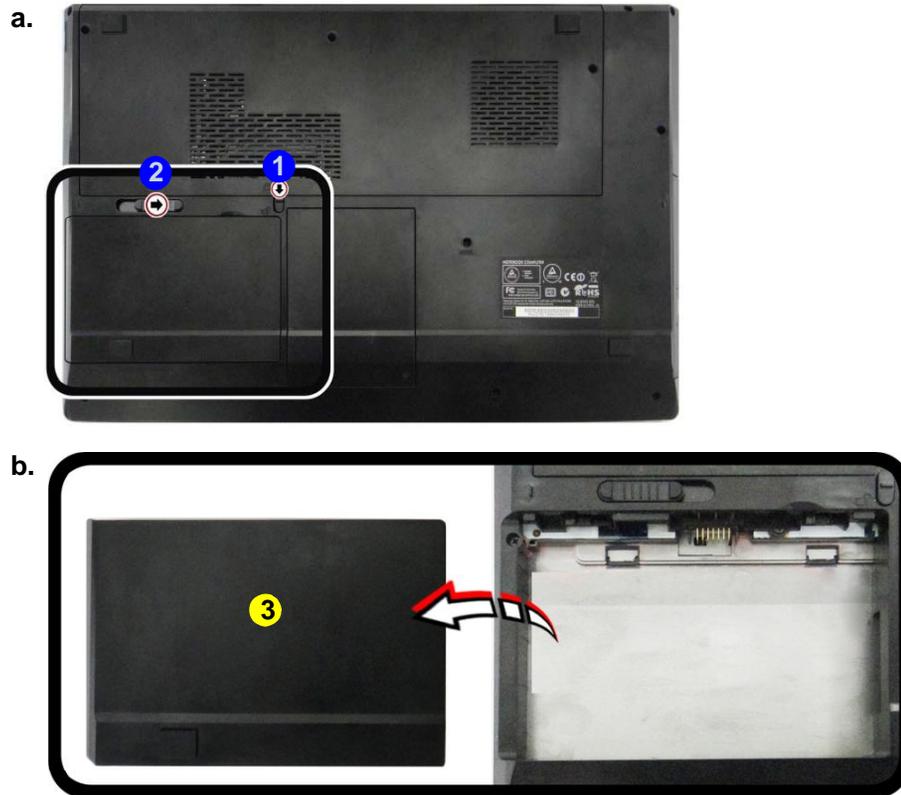


## Removing the Battery


If you are confident in undertaking upgrade procedures yourself, for safety reasons it is best to remove the battery.

1. Turn the computer off, and turn it over.
2. Slide the latch **1** in the direction of the arrow.
3. Slide the latch **2** in the direction of the arrow and battery will pop-up.
4. Lift the battery **3** up (*Figure b*) and out of the battery bay.



*Figure 1*  
**Battery Removal**

- a. Slide the latch **1** in the direction of the arrow, and slide the latch **2** in the direction of the arrow and battery will pop-up.
- b. Lift the battery out of the bay as indicated.

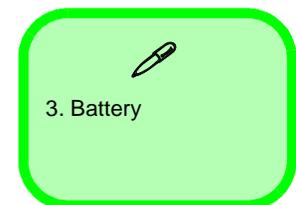


## Disassembly

### Figure 2 Optical Device Removal

- a. Remove the screw and push the optical device out of the computer.

## Removing the Optical (CD/DVD) Device

1. Turn off the computer, and turn it over and remove the battery ([page 2 - 5](#)) and remove the component bay cover ([page 2 - 5](#)).
2. Remove the screw ①, and use a screwdriver to carefully push out the optical device ③ at point ②.
3. Reverse the process to install the new device.

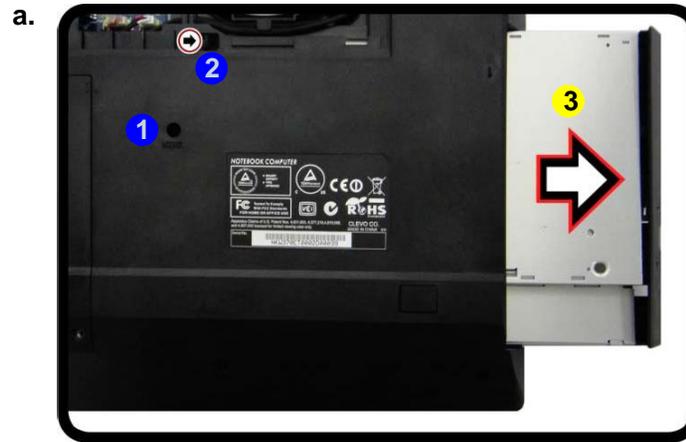

3. Optical Device

- 1 Screw